すみっコみっけ

SumikkoMikke

USER MANUAL

1 Part Names

Reversible faceplate sheet

Specifications:

1.44 inch TFT LCD

LCD monitor resolution: 128 x 128

Camera: 320 x 240

Guide made by
Rachel for Fuzzy N Chic
www.fuzzy-n-chic.com

2 Before playing...

How to insert battery

1) Open the battery lid with a screwdriver
2) Insert 3 AAA batteries. Check the + and - sign to align them correctly.
3) Put the battery lid back on and tighten the screw

When its time to replace the betteries

1) Replace the batteries when the low battery screen appears.
2) Replace the batteries when the screen becomes dim or when the sound becomes inaudible.
3) After replacing the batteries, press the reset button.

3 Initial Settings

Set the date

1) Use the select button to choose the correct year, then press the Enter button to confirm.

2) Repeat for Month and Day

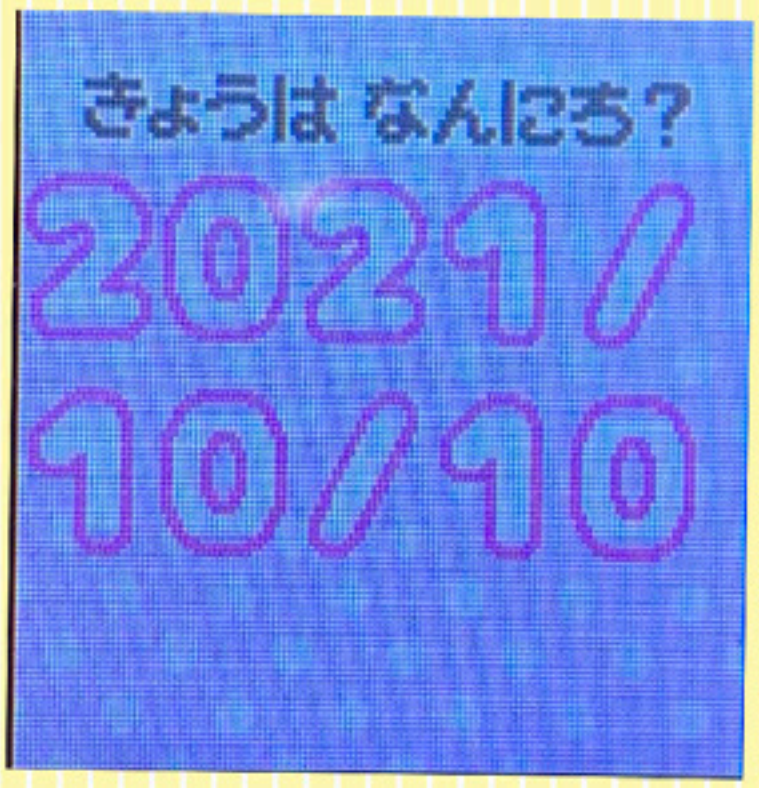

Set the time

1) Use the select button to choose the correct hour, then press the Enter button to confirm.

2) Repeat for Minute

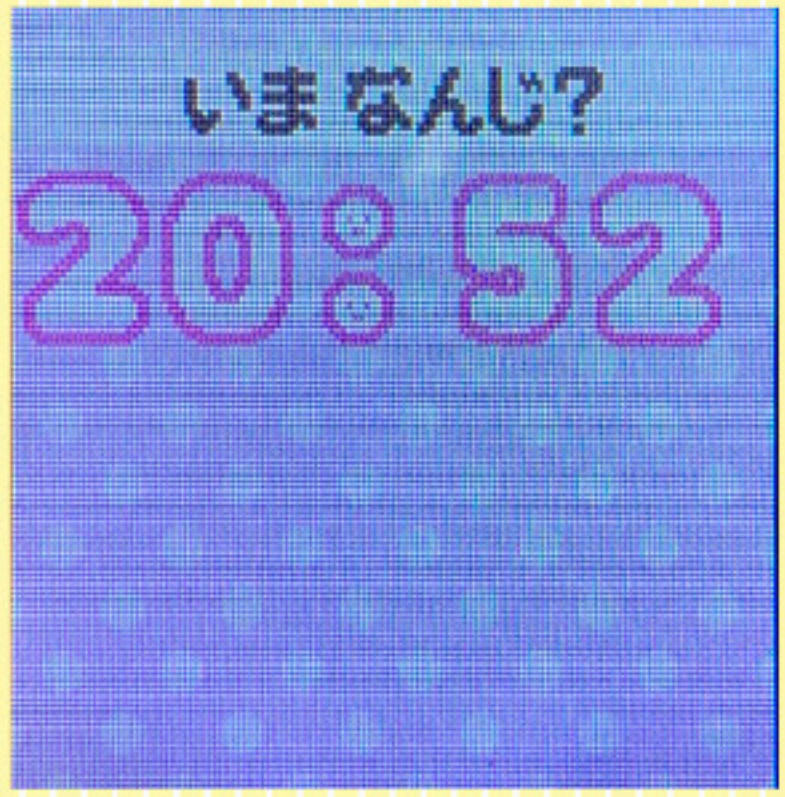

4 Let's play!

Standby Screen

The time and date that you have set will be displayed on the standby screen.

Pressing the Enter button from the standby screen will bring you to the Main Menu!

*The Select and Cancel button cannot be used on Standby Screen

5 Main Menu

If you press the Enter Button while on the standby screen, you will go to the Main Menu

The name of the mode you have chosen will be displayed here.

5 Photo Studio

You can take photos with Sumikko frames & view them on the album.

4 Game Center

Play Mini Games.

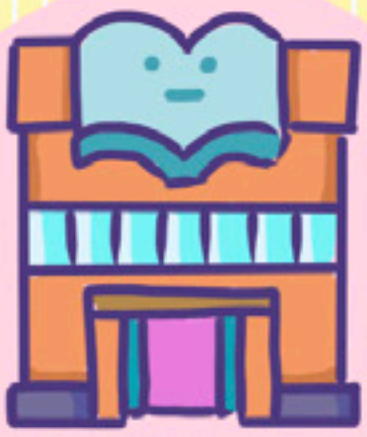

6 Library

Check Sumikkos & Items.

3 Sumikko Market

Buy stuff here.

7 Settings

Adjust basic settings.

1 Sumikko Rooms

Take care of the Sumikkos here.

2 Sumikko Mikke

Meet/catch Sumikkos here.

If you press the Cancel Button while on the Main Menu, you will go back to the standby screen.

1 Sumikko Rooms

After choosing Sumikko Rooms from Main Menu, press Select Button to cycle through all the different rooms.

Shirokuma's Room

>

Penguin?'s Room

>

Tonkatsu's Room

>

Neko's Room

>

Tokage's Room

Happiness & Health Icons

Icons that shows the Sumikko's current status.

Happiness level will be increased if you take care of it.

Health level will be increased if you take feed of it.

It's possible to have everyone gathered in the same room!

If you care for your Sumikko a lot, you may receive different kinds of furniture and clothes!

Let's take care of Sumikko!

If you press the Enter Button on the Sumikko that you want to take care of, the Care menu will be displayed. Choose the type of care with the Select Button and press the Enter Button.

Press the cancel button to return to Sumikko's room.

If you don't take good care of Sumikko...

If you don't take care of the Sumikkos and leave them alone, they will leave their rooms. If there is a letter from Sumikko on the Standby Screen, go find them!

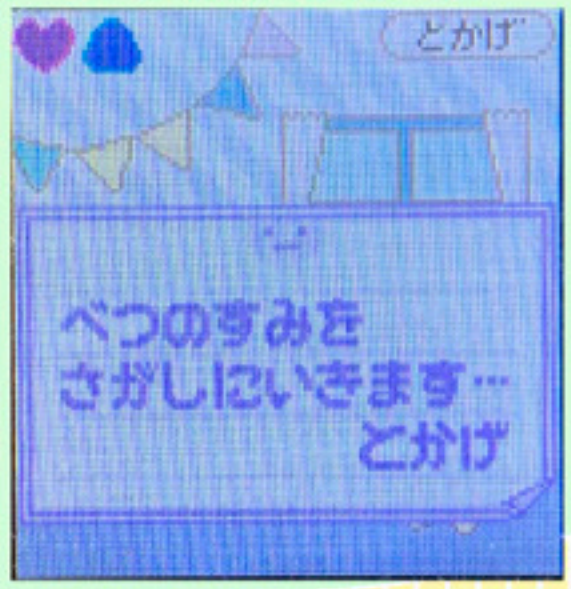

Food

You can give Sumikko food that you have obtained or bought.

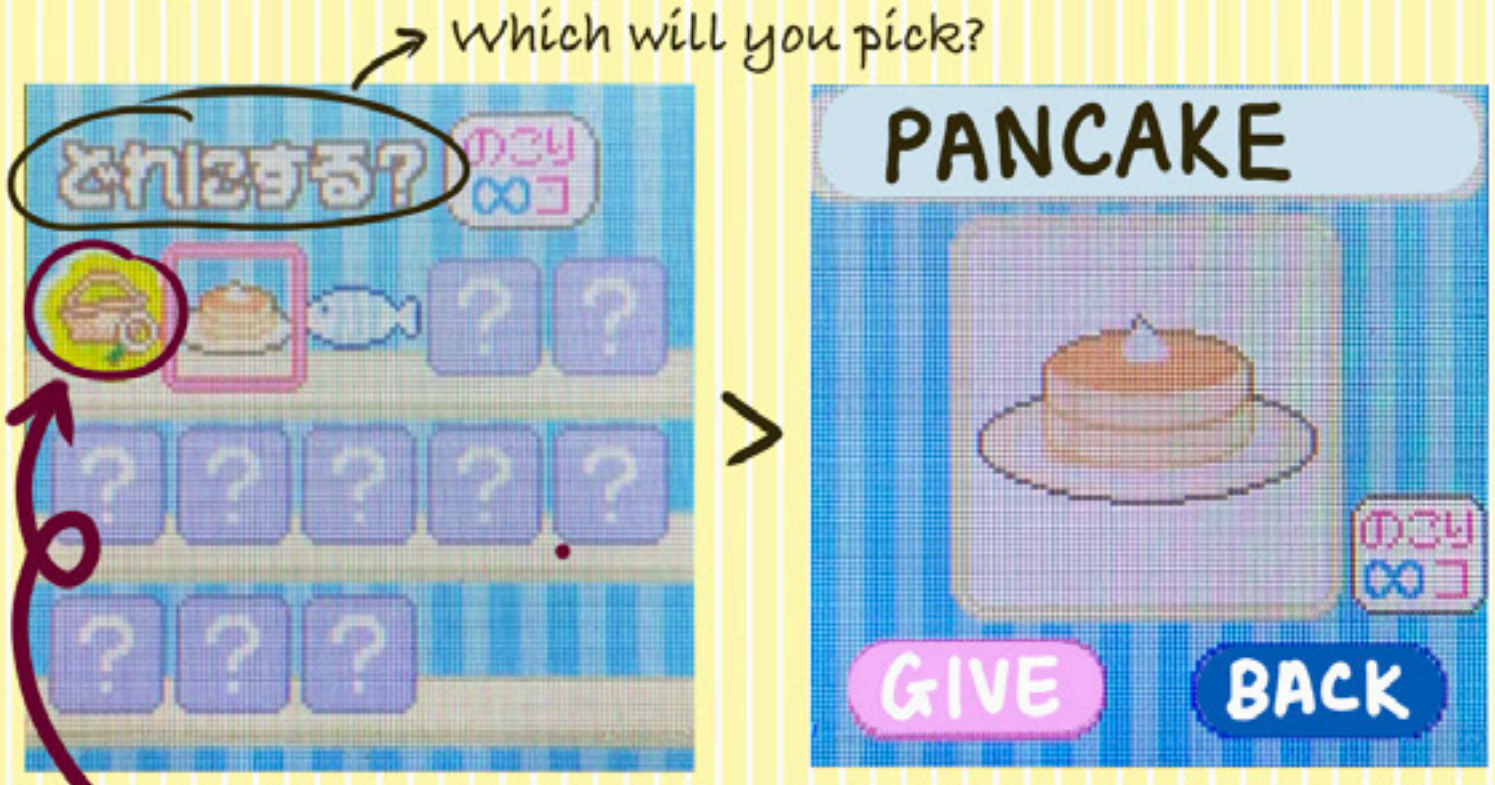

Choose the food you want to give using the Select Button, then press the Enter Button. After selecting "Give" by pressing the Enter Button, Sumikko will eat the food!

Multicolor Food

You can get different types of food with the colors you take on your camera! Select the basket icon on the top left and start shooting!

Step 1: Find a color using the camera. When the device recognizes a color, the basket will become that color!

Step 2: When you find a color you like, press the shutter button to get some food in that color! You can now give it to Sumikko.

About Color Recognition

The camera can recognize a total of 6 colors.

- You can use the sample colors above when using the camera to capture colors. You might need to increase your screen brightness to capture the color accurately.
- When shooting in real life, colors may change depending on brightness, especially when outdoors.
- Sometimes, colors may not be recognized due to reflections or lighting of the surrounding environment.

Sumikkos can react differently according to their food preferences: Like, Normal, or Dislike!

Let's find out the type of food each Sumikko likes. When the health bar is full, Sumikko won't eat anymore.

- You cannot choose foods marked [?] until you unlock them by buying them from Sumikko Market.
- You can give Sumikko pancakes indefinitely without purchasing them.
- Other than pancake, all other foods will reduce by 1 from your inventory everytime you feed it to Sumikko.

Cleaning

When dust appears in your room, clean it up!

Let's clean the room by shaking the device! If you leave it uncleaned for a long time, a huge dust may appear!

Bath

When Sumikkos becomes dirty, give them a bath!

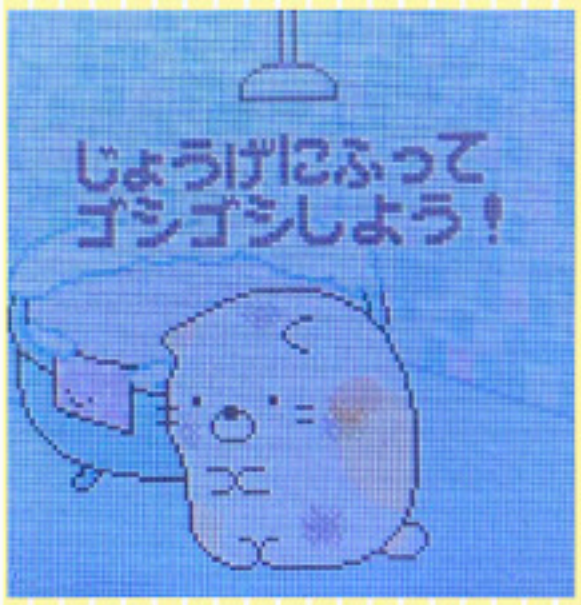

Shake the device up and down to bathe the Sumikko.

Press the shutter button and let the bubbles flow from the shower!

For Tonkatsu, press the shutter button once to heat it up. Press it again and you're done!

Remodel

You can change the furniture and background of Sumikko's room

Use the Select Button to choose whether you want to change the "Furniture" or "Room Design", then press Enter Button.

- You cannot choose the furniture or room design marked [?] until you have obtained it.
- You can buy furniture from Sumikko Market.

When changing furniture

You can only put one on the left side. Choose the furniture. you want to place with the Select Button, then press Enter Button.

When changing room design

You can change the interior of the room. Choose your favorite room design with the Select Button and press Enter Button.

You can set any photo as the room design! If you select this option, you will be able to take a picture with the camera and set it as the room design.

Change Clothes

You can put clothes on the Sumikko. It will be reflected on the standby screen!

Choose the item you want to wear with the Select Button. Select "Change Clothes" and press the Enter Button to wear it on Sumikko.

Clothes marked [?] cannot be worn until it is obtained.

Color Change

Using Camera to Change Clothes

You can change the item to the color taken by the camera!

When the camera detects a color, the shirt icon on the bottom right will become that color.

When you find a color you like, push the Shutter Button. The color of the item will change!

Toys

Sumikko can play with toys.

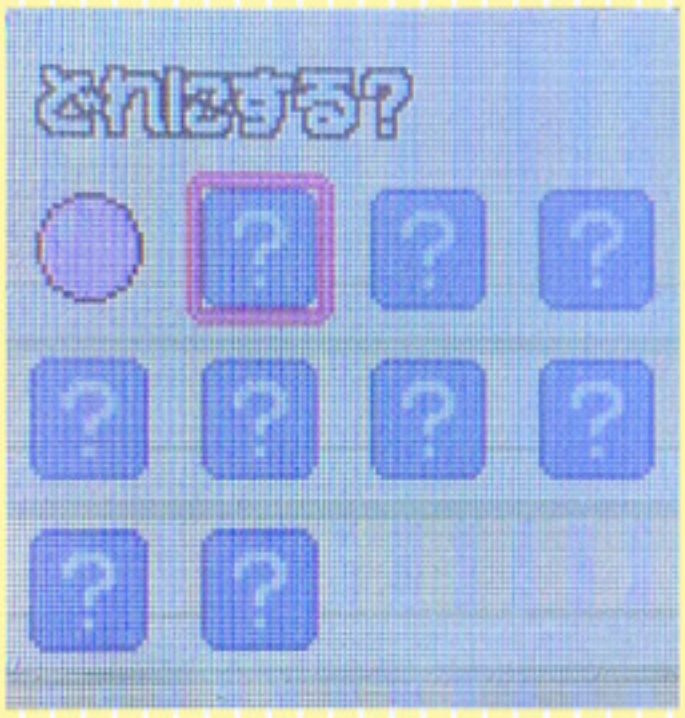

Choose the toy you want to play with using the Select Button, then press the Enter Button, Select "Use" to play with the toy. Sumikko can be seen playing with the toy on the Standby Screen.

Toys marked [?] cannot be used until they are bought from Sumikko Market.

Pet

You can pet the Sumikkos.

Let's pet the Sumikko by pressing Enter Button repeatedly.

If you pet me a lot, my friendship level will increase!

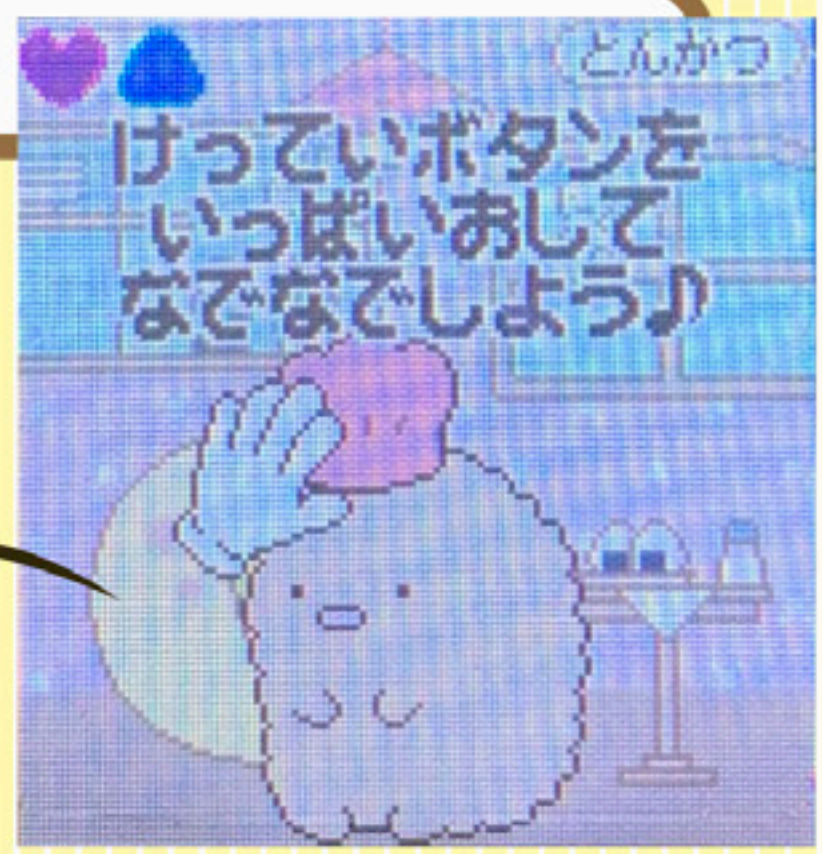

Go Out

Depending on the color of the camera, Sumikko and friends can visit various places!

Find a color with the camera. When the camera recognizes a color, the door will become that color.

After finding a color you like, press the Shutter Button and Sumikkos will be able to go out.

Sumikko Mail

Messages can be sent to Sumikkos. What reply will you receive?

You can send 8 kinds of messages. Choose the message with the Select Button, and press the Enter Button.

おはよう＝Good morning
おやすみ＝Good night
だいすき!＝Love you!
いってきます＝Bye
ただいま!＝I'm back!
つかれた～!＝I'm tired!
うれしい!＝I'm happy!
かなしい＝I'm sad

After sending a message, Sumikko will reply with a stamp! Press the Cancel Button to return to Sumikko's room.

2 Sumikko Mikke

Search for colors, make traps, and catch the Sumikkos!

*When using the camera function, make sure you are in a safe location and there are no people around.

① Choose the trap you want to use with the Select Button, then press the Enter Button. After choosing "Use", the camera will turn on! (Hold the device vertically to use the camera)

Traps marked [?] cannot be used until they are purchased from Sumikko Market. You can use Bonfire and Rice Balls infinitely without buying them. All other traps will reduce by 1 everytime you use them.

② The color you need for the trap is displayed, so use the camera to find it! After finding the correct color, align it with the center of the camera.

③ If the camera recognizes the color, the magnifying glass will grow bigger and the trap will be completed.

④ Sumikko will get closer to the trap.

Sumikko may run away from the trap. Chase them by moving the device in the direction of the arrow!

When Sumikko is in the trap and the message "Shutter Catch!" appears, press the Shutter Button! (Photos taken here will not be saved.)

Note: Some Sumikko can only be caught with specific trap items!

Success!

If you succeed, the Sumikko that is caught will be registered in the Library.

Failure...

If the timing is not right, the Sumikko may run away. Let's try again!

This may happen....

After catching Sumikko, there might be a chance to spin the gacha! Let's look forward to what item will appear!

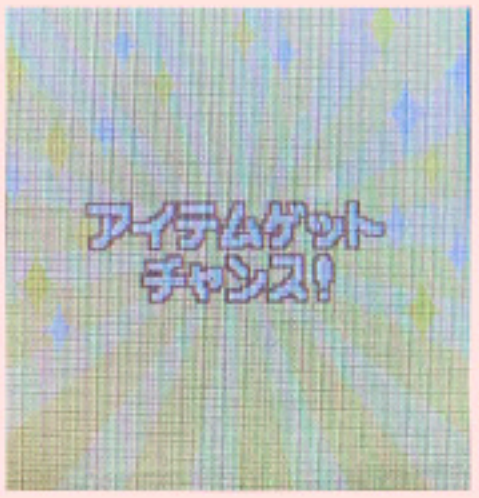

2 Sumikko Market

Items that you can buy from the Sumikko Market:

1) Food, Furniture, Toys - Used in Sumikko Rooms
2) Traps - Used to catch Sumikkos

If you don't have enough SumiCoin to go shopping, earn some at the Game Center.

1) Choose the category you want to buy from, then press Enter Button.

2) Choose the item you want to buy, then press Enter Button.

3) Select "Buy" and press Enter Button to complete your purchase.

Food & Traps: You can buy more than one at a time. Choose the item, then choose the quantity you want. You can hold up to 99 of each item.

Furniture & Toys: After buying it once, a "Sold Out" label will be displayed.

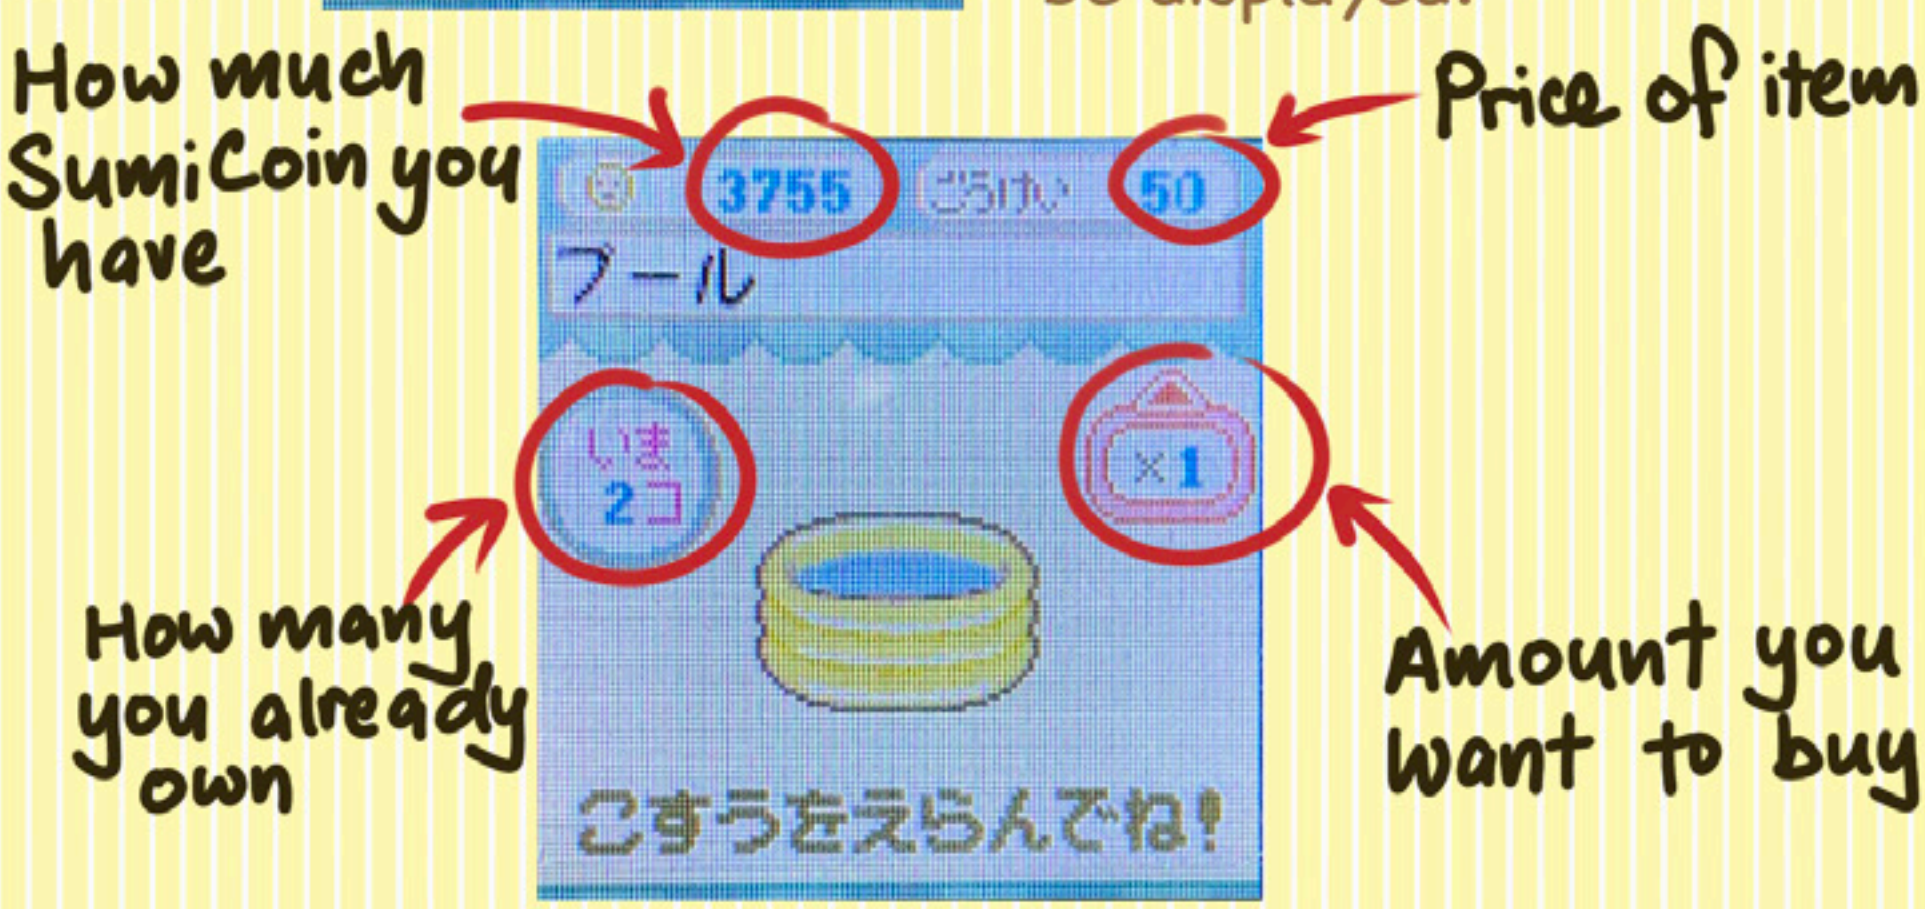

*Different furniture will appear for sale on different times of the year (New Year, Halloween, Christmas, etc). Adjust your device date to skip ahead to unlock new furniture!

4 Game Center

There are 6 kinds of mini games you can play! Choose the game you want to play with the Select Button, then press Enter Button.

Title of the game will be displayed.

Normal

Hard

Instructions

Some games will not start until you hold the device vertically.

Penguin?'s Trampoline
Tilt the device left and right to make Penguin? catch the cucumbers! Be careful not to catch the chillies.

Shirokuma's Drive
Tilt the device left and right to catch the stars! Be careful of the obstacles.

Tokage's Color
Before Tokage reaches [x], use the camera to search for colors that match the color of the hands outline!

Neko's Whipped Cream
Shake the device hard to whip the cream! Let's set a new record!

Tapioca Search
Move the device up, down, left, & right to search for tapiocas! When the tapioca gets onto the spoon, press the Shutter Button to catch it!

Tonkatsu's Fortune Telling
Tonkatsu and Ebi Fry will tell your fortune from the hot pot!

After clearing a game, you can earn SumiCoins! The amount you earn depends on how well you play. Let's play more to earn more!

5 Photo Studio

You can take pictures and view them in the album! You can store up to 50 photos in the album.

Shoot
Select this option to take photos with the camera.

View
Select this option to open the album to view the photos you have taken.

Shoot

You can take pictures with cute Sumikko frames!

If you care for the Sumikkos a lot, you may unlock new frames!

Choose the frame using the Select Button, then press Enter Button. Press the Shutter Button to take a picture.

View / Delete

You can view the photos you have taken in the album. Press the Select Button to scroll through the photos.

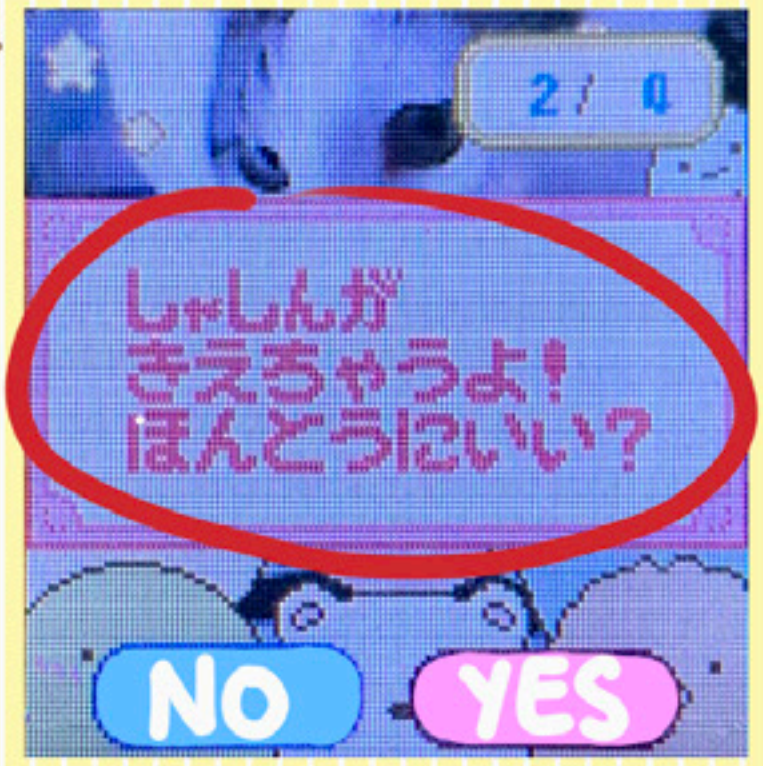

After taking a picture, select "Keep" to save it in the album, or "Delete" to delete it

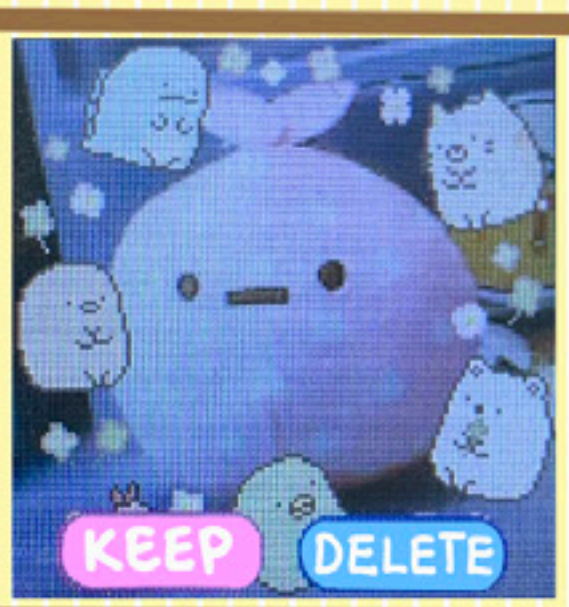

If you press the Enter Button, you have the option to delete the photo.

Photo will be deleted! Really OK?

6 Library

You can check your collections at the library.

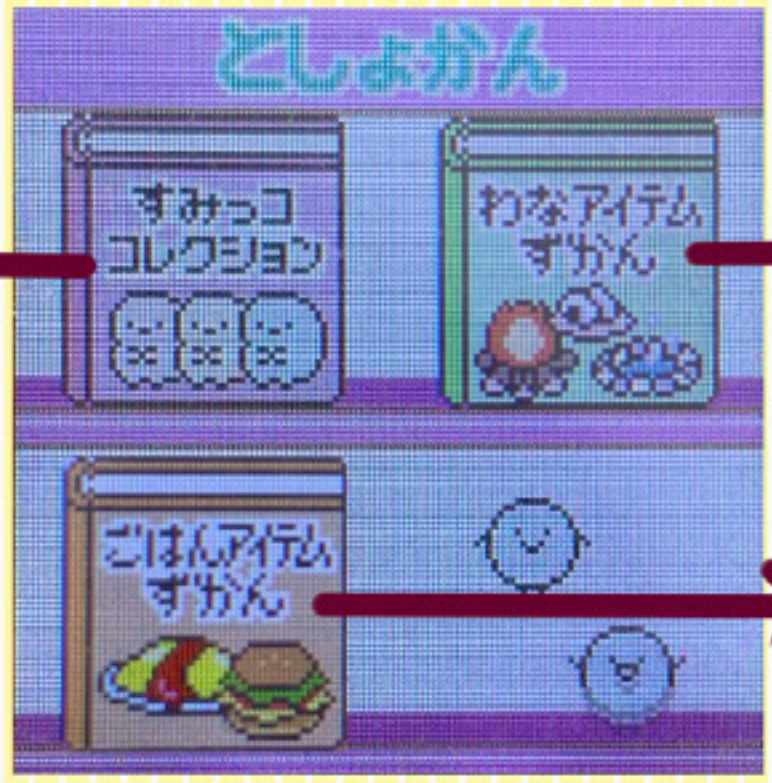

Sumikko Collection
You can view the Sumikkos and Minikkos that you have caught here.

Traps Book
You can view the traps that you have obtained here.

Food Book
You can view the food that you have obtained here.

Sumikko Collection

Choose the Sumikko you want to view with the Select Button, then press Enter Button.

On the Sumikko screen...
Enter Button: The illustration will be displayed in full screen.
Select Button: View the next illustration.

Traps & Food Book

Choose the item you want to view with the Select Button, then press Enter Button. You can see the description of each item.

From the trap book

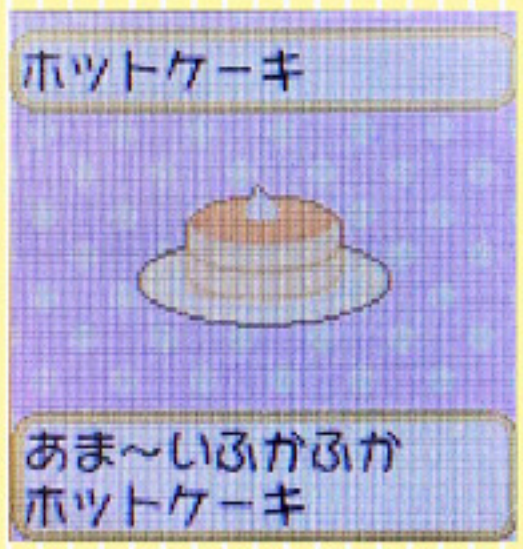

From the food book

Items marked with ★ are newly obtained items.

7 Settings

You can set the date, time, volume, and brightness here.

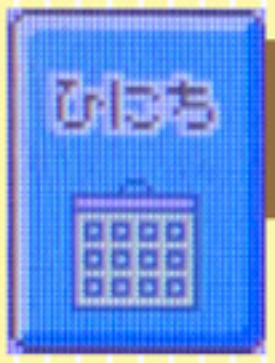

Date & Time

Shows the date & time from initial settings. You can change it here.

Brightness

There are 5 levels of brightness. Default setting is level 3.

Volume

There are 6 levels of volume. Default setting is level 3.

Reset

You can erase all the data and reset the device here. Select "YES" twice to confirm.

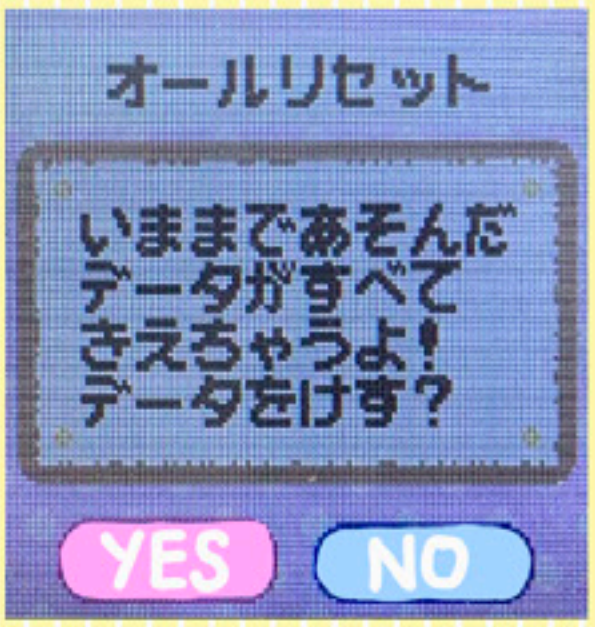

Password

You can enter passwords here to get special Sumikkos! Passwords are relesed in magazines and on official website. Check the details from Takara Tomy's official site via the QR code below:

See next page for list of passwords that have been discovered so far.

If the screen display acts strangely or does not display anything, press Enter Button for 3 seconds or longer. If that does not fix the problem, push the Reset Button on the back of the device.

Passwords

Special Book!

After inputting passwords, a new book will appear in the Library containing the Special Sumikkos. You can get movie versions of the Sumikko with the passwords!

コーンスープ

せっていモードから
入力画面を開いて
このパスワードを入れてね！

うさぎカチューシャ

【2022年3月公開】

キラキラかんむり

【2022年2月公開】

コーヒーカップ

【2022年1月公開】

いちごフェア

【2021年12月公開】

ハンバーガー

【2021年11月公開】

いちごフェア

【2021年10月公開】

こーんのおともだち

【2022年9月公開】

たのしいキャンプ

【2022年8月公開】

うさぎカチューシャ

【2022年7月公開】

コーヒーカップ

【2022年6月公開】

コーンスープ

【2022年5月公開】

キラキラほうせき

【2022年4月公開】